

Replacement Guide

For E-Tether Pens

E-Tether Replacement Guide



Steps

1. Locate the bay where the e-tether pen attaches to the Topaz tablet.



2. Remove the screw that secures the bay cover to the Topaz tablet with a Phillips screwdriver. This cover prevents the pen from being removed from the pad.



3. Remove the bay cover and remove the 1/8" plug from the Topaz tablet and replace it with a new e-tether pen.



4. After the e-tether pen is replaced, replace the bay cover and screw to secure.